


MUSTEE ENTRY RAMP

INSTALLATION INSTRUCTIONS

ROUGH-IN DIMENSIONS:

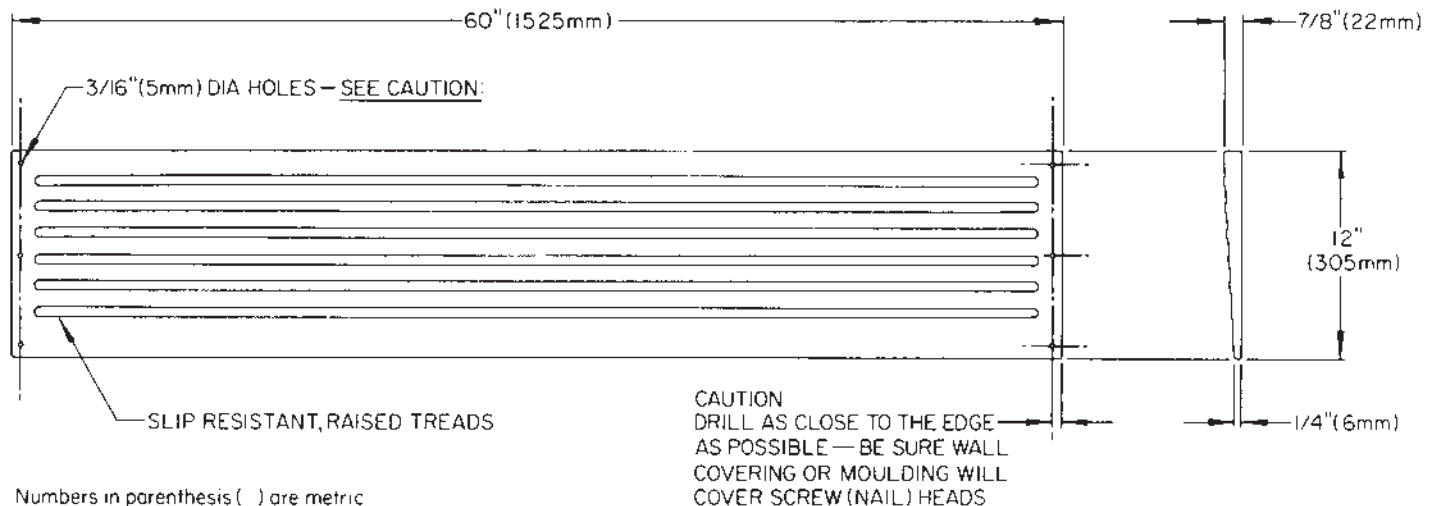

Numbers in parenthesis () are metric equivalents in millimeters (mm)

Prepare a bed of quality, water resistant panel adhesive—approximately 12" wide X 60" long x 1/8" deep, adjacent to the front edge (threshold) of your MUSTEE BARRIER/FREE-SHOWER FLOOR. Set Entry Ramp in place—lift up to "vent-out" adhesive and replace. HINT: You may predrill the edges of the Entry Ramp to accept "drywall" type screws to mechanically fasten ramp in addition to the adhesive. BE SURE that drywall or moulding will cover the screw or nail heads.

Cover top surface of Entry Ramp (could use carton) and apply weights to keep ramp pressed into adhesive. Keep weight in place at least 12 hours—giving adhesive time to cure.

If you are going to finish the room with tile, butt the edge of the tile against the edge of the Entry Ramp, this will also hold the Entry Ramp in place.

ACCESSORY

An optional Collapsible Water Barrier Kit (PN 360.210) is available to help retain water from splashing out of your shower floor.



Quality Plumbing Products

E.L. MUSTEE & SONS, INC.

5431 West 164th Street • Cleveland, Ohio 44142

SI-172 (9-13)