



**MUSTEE**  
Preferred by the "Pros"

# Installation Instructions

E.L. Mustee & Sons, Inc.  
5431 West 164th St.  
Brook Park, OH 44142

Phone: 216.267.3100

Fax: 216.267.9997

Email: [info@mustee.com](mailto:info@mustee.com)

Web: [www.mustee.com](http://www.mustee.com)

Model:

**360.100**

## ENTRY RAMP





**READ ALL INSTRUCTIONS CAREFULLY AND INSPECT PRODUCT FOR DAMAGE BEFORE STARTING YOUR INSTALLATION.**




**ADA  
DESIGNED PRODUCT**

**Meets ICC A117.1-2017 Standard**

### Included in Carton

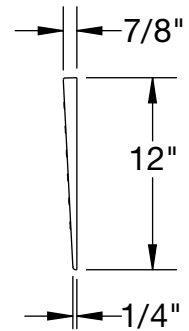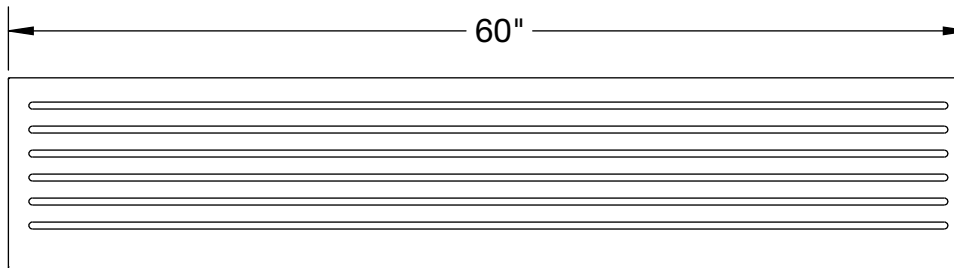


### Tools Required




**TUB SURROUND  
ADHESIVE**

**OR**



**SILICONE  
ADHESIVE**

### OPTIONAL TOOLS

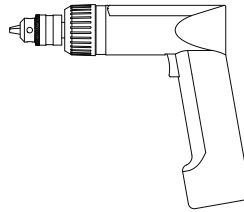


  
**STAINLESS STEEL  
OR  
DECK SCREWS**

### CARE & CLEANING

The surface of your Entry Ramp may be cleaned with a mild soap solution in warm water using a soft cloth. When using a cleaner product, carefully read the label to ensure that the cleaner is safe for use on the material. Stubborn stains can be cleaned using "Soft Scrub®" by Clorox® or a powdered detergent such as "Spic-n-Span" or a bleach solution – follow bleach manufacturers recommended procedures pertaining to safety, handling and use of their product. Do not allow cleaners to sit or soak on the surface. Wipe surface clean and rinse completely with water immediately after cleaner application. Rinse and dry any overspray on nearby surfaces. Never use abrasive scouring powder or steel wool pads, as they will scratch the surface.


### Step 1

Turn Entry Ramp upside down and apply an 1/8" bead of adhesive along each rib and front edge as shown.

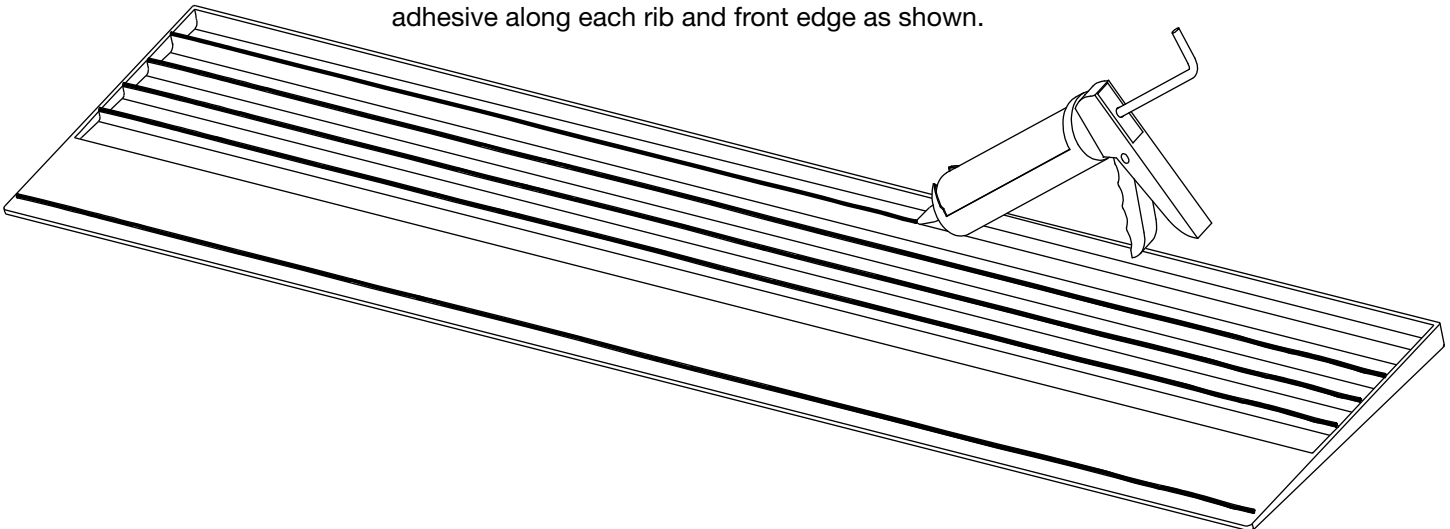


## Step 2

Set Entry Ramp in place in front of your Mustee Barrier Free Shower Floor. Press down and wipe away any excess adhesive that may seep out.

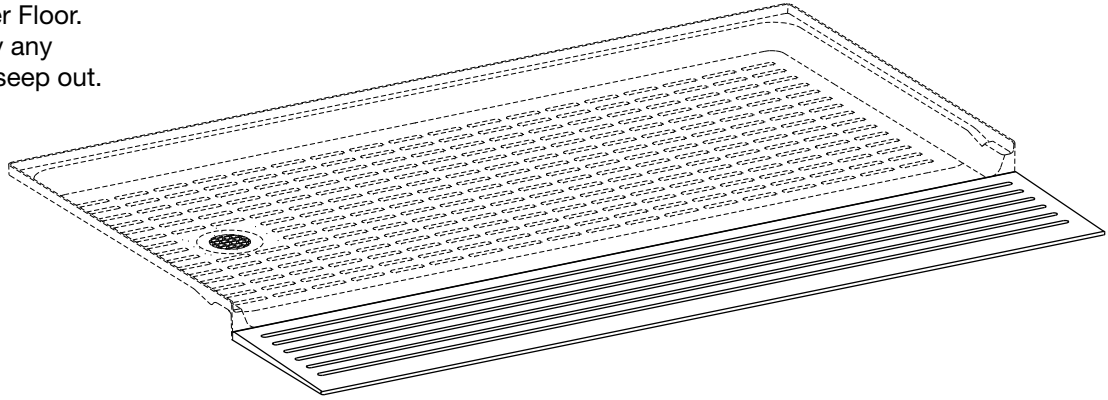


## OPTIONAL

Predrill 6 holes ( 3 per side) along side edges to mechanically fasten the Entry Ramp in addition to the adhesive. Apply silicone into holes before screws. Do not over tighten screws to avoid cracking. Wipe away any excess silicone.

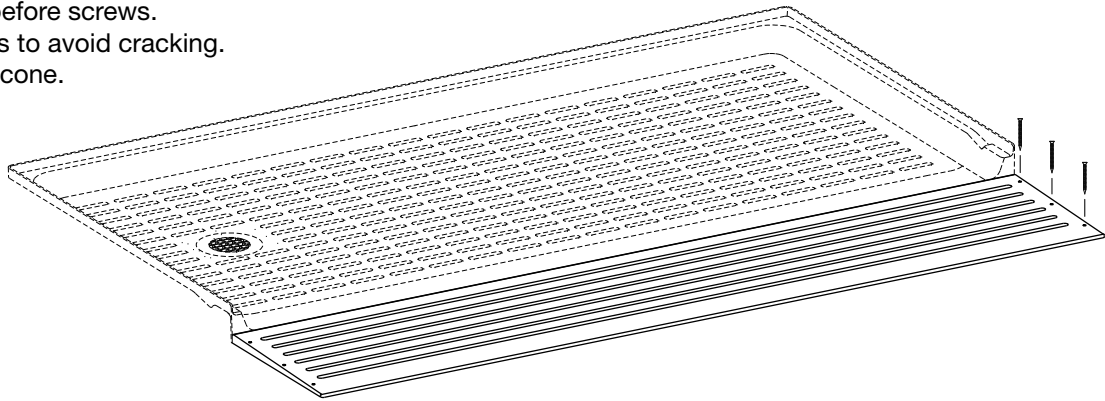

## Step 3

Cover top surface of Entry Ramp and apply weights until adhesive cures.

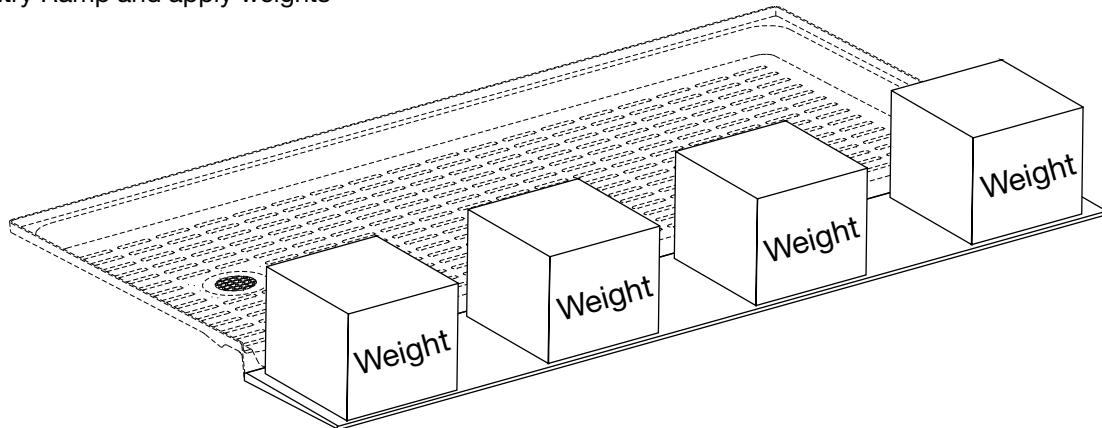

## ACCESSORY

An optional Collapsible Water Barrier Kit (PN 360.210) is available to help retain water from spashing out onto floor.

## INSTALLATION QUESTIONS

Questions on the installation or missing parts, call 216-267-3100 or e-mail [customerservice@mustee.com](mailto:customerservice@mustee.com) for assistance. Hours of operation are Monday to Friday, 8:30 a.m. to 4:30 p.m. E.S.T.

Please have the installation manual available when calling.

**DO NOT RETURN PRODUCT TO THE PLACE OF PURCHASE.**